

**Fiber Splice Horizontal
Closure**

Model:
N600H-0096-4

Este manual está disponible en español en la página de Eaton:
Tripplite.Eaton.com/support

Ce manuel est disponible en français sur le site Web de Eaton :
Tripplite.Eaton.com/support



Powering Business Worldwide

1. Closure Assembly

1.1 Open the Closure

Using the included tool, open the buckles of the closure (Figure 1-1).



Description	M8 Alien Spanner
Quantity	1 Pc.

Figure 1-1: Open the buckle of the closure

1. Closure Assembly

1.2 Install the Uncut Cable

- 1 Unlock the limiting button to turn over all the splicing trays from the bottom (Figure 1-2).



Figure 1-2: Turn over all the trays

- 2 Remove the cable clamp from the cable entry (Figure 1-3).

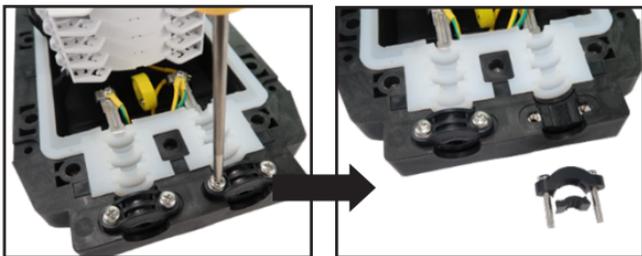


Figure 1-3: Remove cable clamp

1. Closure Assembly

- Strip the sheath of the uncut cable for a suitable length ≥ 4 ft. (1.2 m) (Figure 1-4).

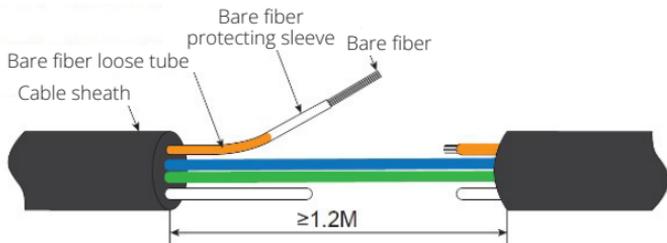


Figure 1-4: Strip the uncut cable

- Cut the strength member of the cable from the stripped cable sheath to 2.4 in. (60 mm) to fix the cable (Figure 1-5).

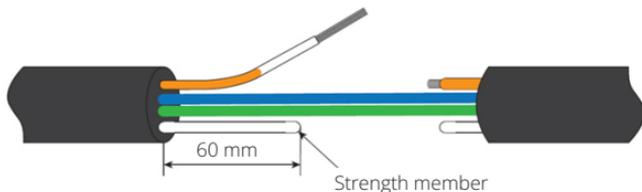


Figure 1-5: Cut the strength member

1. Closure Assembly

- 5 Wrap the un-vulcanized rubber tape around the cable (Figure 1-6).




A	Description	Un-vulcanized Rubber Tape
	Quantity	1 Pc.

Figure 1-6: Wrap un-vulcanized rubber tape

- 6 Run the cable through the cable entry (Figure 1-7).

Note: When bare fiber is used, EVA tube should be used to protect bare fiber. Use insulation tape to wrap the EVA tube and cable.

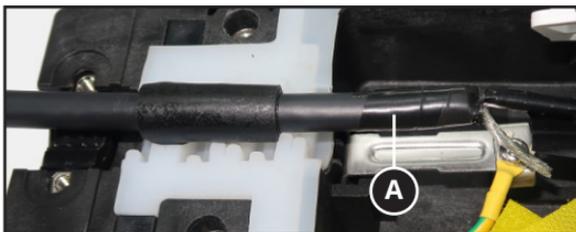


A	Description	Insulation Tape
	Quantity	1 Roll

Figure 1-7: Run the cable through the cable entry

1. Closure Assembly

- 7 Secure the plastic clamp, hoop and strength member (Figure 1-8).

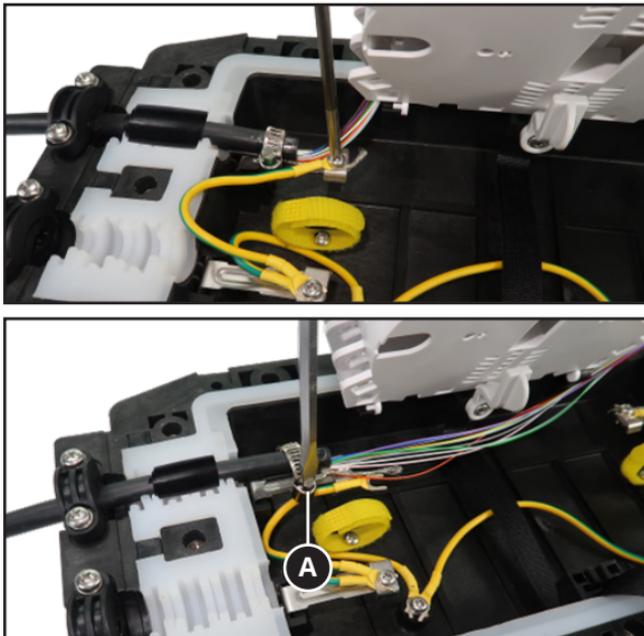

A	Description	Ø10-Ø19 Hoop
	Quantity	4 Pcs.

Figure 1-8: Secure the plastic clamp, hoop and strength member

1. Closure Assembly

- 8 Store the slack cable in the bottom of the case (Figure 1-9).



Figure 1-9: Store the slack cable

- 9 Manage cable with the magic band tie (Figure 1-10).

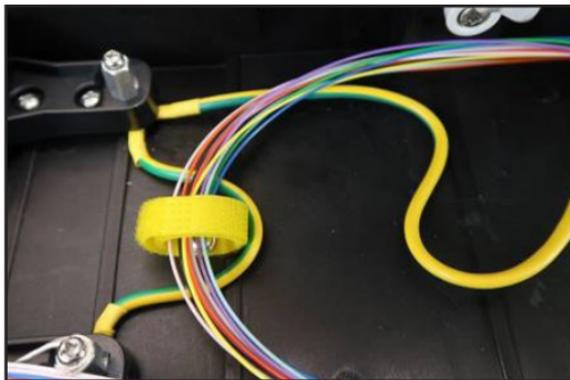


Figure 1-10: Manage cable

1. Closure Assembly

- 10 Install the pass-through on the other side (Figure 1-11).



Figure 1-11: Install pass-through cable through other cable entry

- 11 For the unused cable entry, use the choke plug to seal cable entry (Figure 1-12).



A	Description	Choke Plug (Ø12.5mm)
	Quantity	6 Pcs.

Figure 1-12: Seal the unused hole

1. Closure Assembly

1.3 Install the Branching Cable

- 1 Turn over the splice tray and remove the cable clamp from the tray (Figure 1-13).

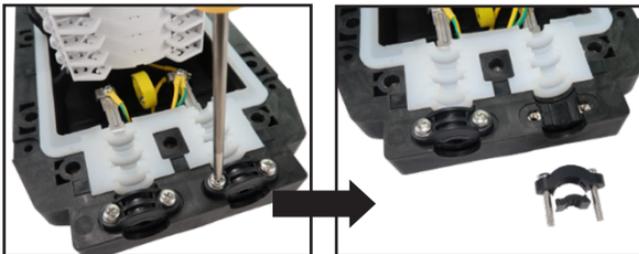


Figure 1-13: Remove cable clamp

- 2 Strip the branching cable to a suitable length of ≥ 4 ft. (1.2 m) (Figure 1-14).

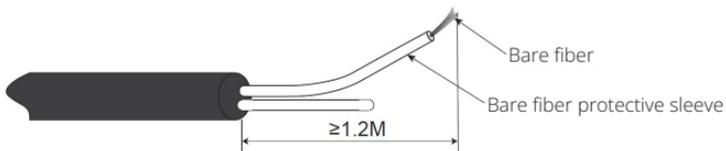


Figure 1-14: Strip the branching cable

- 3 Cut the strength member of the cable from the stripped cable sheath 2.4 in. (60 mm) to fix the cable (Figure 1-15).


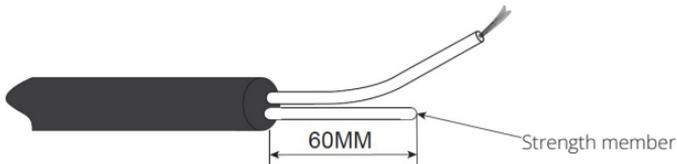


Figure 1-15: Strength member

1. Closure Assembly

1.4 Splice and Store the Fiber

- 1 Cut the loose tube with a loose tube stripper. Pull out the loose tube, then clean the bare fiber with cleaning paper (Figure 1-16).

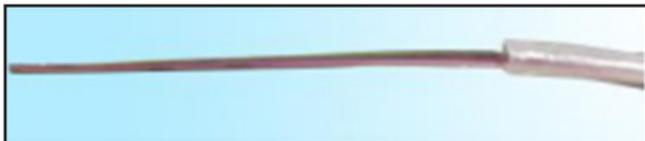


Description	Clean Paper
Quantity	1 Pc.

Figure 1-16: Strip the fiber

1. Closure Assembly

- 2 Insert the bare fiber into the EVA tube, then secure the EVA tube and fiber in the splice tray with a tie (Figure 1-17).

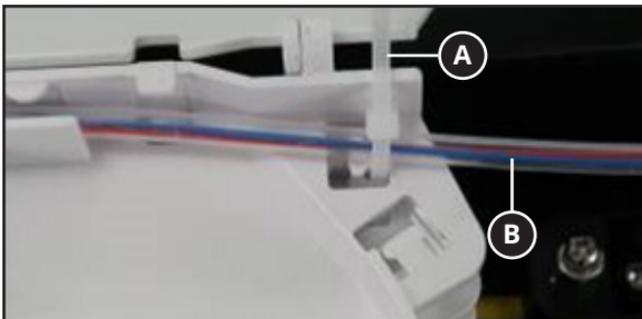


A 	Description	Nylon Cable Tie
	Quantity	20 Pcs. (use as required)
<hr/>		
B 	Description	EVA Tube
	Quantity	1 Roll

Figure 1-17: Secure the EVA tube and fiber

1. Closure Assembly

- 3 Coil the bare fiber in the splicing tray (Figure 1-18).

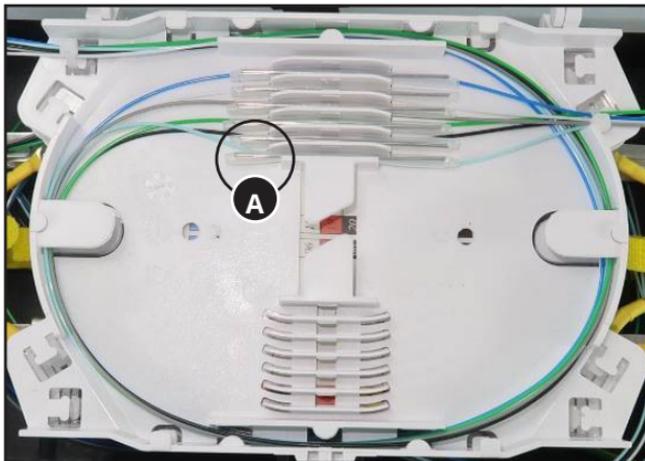

	Description	Single Splicing Protective Tube
	Quantity	96 Pcs.

Figure 1-18: Coil the bare fiber

1. Closure Assembly

- 4 Close the cover of the splicing tray and tie them up with the bondage belt (Figure 1-19).



Figure 1-19: Close the splicing tray cover

1. Closure Assembly

1.5 Close the Closure

- 1 Put the cover on the bottom case. Take note of the direction of the cover. Secure the screws that connect the cover and the bottom case according to the sequence shown in Figure 1-20.



Figure 1-20: Secure the closure

2. Closure Installation

2.1 Aerial Installation (Default Installation Configuration)

The aerial installation accessory is shown in Figure 2-1.



A	Description	Aerial Mounting Hardware
	Quantity	1 Set

Figure 2-1: Aerial installation accessory

- 1 Fix the aerial clasps into the slots at the edge of the bottom base (Figure 2-2).



Figure 2-2: Install the clasps

2. Closure Installation

- 2 Mount the closure to the wire and fasten the bolts (Figure 2-3).



Figure 2-3: Mount the closure to the wire

2. Closure Installation

2.2 Wall Installation (Optional)

The wall-mounting accessory is shown in Figure 2-4.

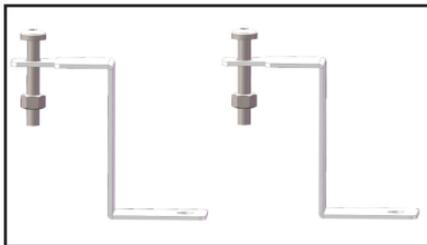


Figure 2-4: Wall-mounting accessory

- 1 Drill two holes in the wall using a percussion drill (Figure 2-5).

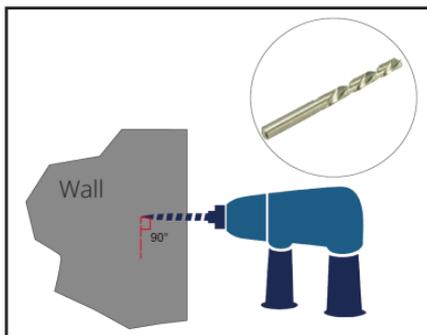


Figure 2-5: Drill holes in the wall

2. Closure Installation

- 2 Position the two holes 14 in. (360 mm) apart (Figure 2-6).



Figure 2-6: Position of the holes

- 3 Hammer the expansion bolt completely into the drilled holes. Rotate the bolt clockwise to make the expansion sleeve wholly expanded, then rotate the nut counterclockwise and remove the spring washer, flat washer and nut (Figure 2-7).

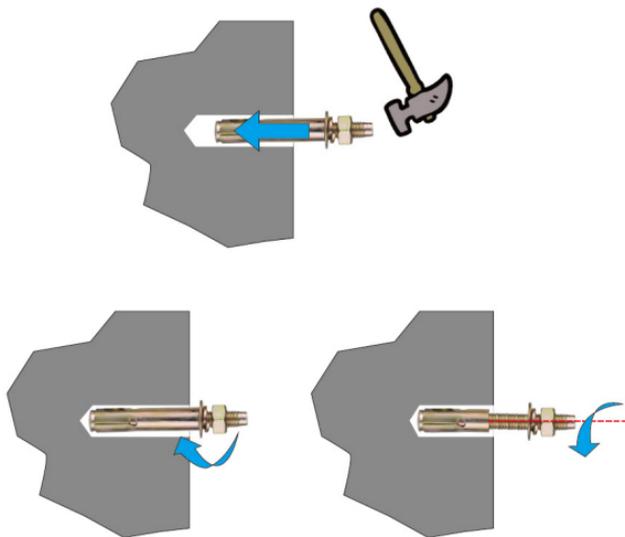


Figure 2-7: Install the expansion bolt

2. Closure Installation

- 4 Fix the wall-mounted clasps into the slots at the edge of the bottom base (Figure 2-8).



Figure 2-8: Install the clasps

- 5 Put the closure with the wall-mounted clasps onto the wall (Figure 2-9).



Figure 2-9: Put the closure onto wall

3. Warranty

3-Year Limited Warranty

We warrant our products to be free from defects in materials and workmanship for a period of three (3) years from the date of initial purchase. Our obligation under this warranty is limited to repairing or replacing (at its sole option) any such defective products. Visit [TrippLite.Eaton.com/support/product-returns](https://www.computersupport.com) before sending any equipment back for repair. This warranty does not apply to equipment which has been damaged by accident, negligence or misapplication or has been altered or modified in any way.

EXCEPT AS PROVIDED HEREIN, WE MAKE NO WARRANTIES, EXPRESS OR IMPLIED, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. Some states do not permit limitation or exclusion of implied warranties; therefore, the aforesaid limitation(s) or exclusion(s) may not apply to the purchaser.

Eaton has a policy of continuous improvement. Specifications are subject to change without notice. Photos and illustrations may differ slightly from actual products.



Eaton
1000 Eaton Boulevard
Cleveland, OH 44122
United States
Eaton.com

© 2023 Eaton
All Rights Reserved
Publication No. 23-04-062 /
93-47BD_RevA
May 2023

Eaton is a registered
trademark.

All trademarks are property
of their respective owners.