

Owner's Manual

HDMI Active Extender Wallplate

Model: P166-001-A

Package Contents:

- P166-001-A HDMI Active Extender Wallplate
- Owner's Manual

Product Features:

- Extend a 1080p (24Hz) signal up to 150 ft. from the source using 24AWG HDMI cable
- Extend a 1080p (24Hz) signal up to 75 ft. from the source using 28AWG HDMI cable
- Supports 7.1 channel surround sound, dts-HD and Dolby True HD audio
- HDCP and 3D compatible


Optional Accessories:

- P568-Series High-Speed HDMI Cables
- P568-100-HD 24 AWG High-Definition, High-Speed HDMI Cable—100 ft.

PROTECT YOUR INVESTMENT!

Register your product for quicker service
and ultimate peace of mind.

You could also win an
ISOBAR6ULTRA surge protector—
a \$100 value!

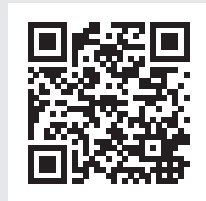

www.tripplite.com/warranty



1111 W. 35th Street, Chicago, IL 60609 USA • www.tripplite.com/support

Copyright © 2018 Tripp Lite. All rights reserved.


Installation

Notes:

1. Test to make sure the entire installation works properly before pulling cables through ceilings/walls.
2. The P166-001-A has been designed for use with Tripp Lite P568-Series HDMI cables. To ensure maximum distance and performance, it is recommended that you use Tripp Lite P568-Series HDMI cabling.

- 1** Connect the longer HDMI cable between the source and the INPUT port on the back of the P166-001-A.

Note: When transmitting a 1080p (24Hz) signal, the HDMI cable connecting the source to the P166-001-A must be no longer than 150 ft. For distances over 75 ft., use 24AWG HDMI cable, such as P568-100-HD.

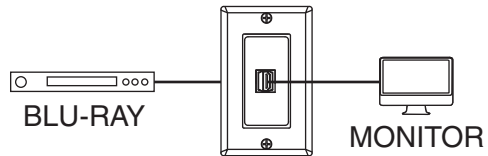

- 2** Connect an HDMI cable from the front of the P166-001-A to your monitor.

Note: the HDMI cable connecting the P166-001-A to the monitor must be no longer than 16 ft. (5 m).

Warranty & Product Registration

3-Year Limited Warranty

TRIPP LITE warrants its products to be free from defects in materials and workmanship for a period of three (3) years from the date of initial purchase. TRIPP LITE's obligation under this warranty is limited to repairing or replacing (at its sole option) any such defective products. To obtain service under this warranty, you must obtain a Returned Material Authorization (RMA) number from TRIPP LITE or an authorized TRIPP LITE service center. Products must be returned to TRIPP LITE or an authorized TRIPP LITE service center with transportation charges prepaid and must be accompanied by a brief description of the problem encountered and proof of date and place of purchase. This warranty does not apply to equipment which has been damaged by accident, negligence or misapplication or has been altered or modified in any way.

EXCEPT AS PROVIDED HEREIN, TRIPP LITE MAKES NO WARRANTIES, EXPRESS OR IMPLIED, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. Some states do not permit limitation or exclusion of implied warranties; therefore, the aforesaid limitation(s) or exclusion(s) may not apply to the purchaser.

EXCEPT AS PROVIDED ABOVE, IN NO EVENT WILL TRIPP LITE BE LIABLE FOR DIRECT, INDIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OF THIS PRODUCT, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE. Specifically, TRIPP LITE is not liable for any costs, such as lost profits or revenue, loss of equipment, loss of use of equipment, loss of software, loss of data, costs of substitutes, claims by third parties, or otherwise.

PRODUCT REGISTRATION

Visit www.tripplite.com/warranty today to register your new Tripp Lite product. You'll be automatically entered into a drawing for a chance to win a FREE Tripp Lite product!*

* No purchase necessary. Void where prohibited. Some restrictions apply. See website for details.

WEEE Compliance Information for Tripp Lite Customers and Recyclers (European Union)



Under the Waste Electrical and Electronic Equipment (WEEE) Directive and implementing regulations, when customers buy new electrical and electronic equipment from Tripp Lite they are entitled to:

- Send old equipment for recycling on a one-for-one, like-for-like basis (this varies depending on the country)
- Send the new equipment back for recycling when this ultimately becomes waste

WARNING

Use of this equipment in life support applications where failure of this equipment can reasonably be expected to cause the failure of the life support equipment or to significantly affect its safety or effectiveness is not recommended. Do not use this equipment in the presence of a flammable anesthetic mixture with air, oxygen or nitrous oxide.

Tripp Lite follows a policy of continuous improvement. Product specifications are subject to change without notice.



1111 W. 35th Street, Chicago, IL 60609 USA • www.tripplite.com/support

17-12-285 93-3391_RevB